

LESLIE CONSOLE CONNECTOR KIT 8066

INSTALLATION INSTRUCTIONS

FOR USE WITH: LESLIE Speaker Models 122, 122V, 122RV, 142, 222, 222RV
with HAMMOND #12 Speaker
HAMMOND Model X-66

MULTIPLE SPEAKER INSTALLATION: If more than two speakers are to be used, consult the owner's manual or service manual of the specific LESLIE speaker to be added.

KIT CONTENTS:

1 Console Connector	032698	1 Tremolo-Echo Control	
1 6 Conductor Cable	017277		
1 Instructions	032789	brown	032706
3 Insulated Staples	028464	ebony	032714
1 Oiler	053025	ivory	032722
2 Screw, 6-32 x 5/8	028001		
2 Screw, 8 x 1/2	032771		
2 Cable Tie	032854		
1 Cable Clamp	032821		
1 Adapter, Wire, 10" 22g	028241		
1 Flat Washer, #8 x 1/2"	015578		

TO INSTALL:

1. Remove the console back panel and the bolts securing the console top. Remove the top.
2. Remove the metal shield cover from the top of the tab-switch circuit case.
3. Remove the two brown wires from terminal "X76" of the Brite Voice Preamp Board Assembly. Connect these wires together using the wire nut provided. (See "A" on Fig. 1.)
4. Solder one end of the adapter wire to terminal "X76" of the Brite Voice Preamp Board Assembly. (See "A" on Fig. 1.)
5. Strip approximately 1/4 inch of insulation away from one of the yellow wires attached to the "Tremulant" tab in the 8' Accompaniment Tab Bank. Solder the other end of the adapter wire to this wire. Insulate with plastic tape. (See "B" on Fig. 1.) Replace the shield, top and back panel.
6. Loosen but do not remove the four screws securing the expression housing to the wooden base of the console. (See "C" on Fig. 2.)
7. Place the insulation material provided on the front lip of the connector chassis. Insert the lip under the rear of the metal expression housing base. Center the chassis behind the housing. (See "D" on Fig. 2.)
8. Drill two 1/16 inch pilot holes and secure the connector chassis using the wood screws provided.
9. Re-tighten the screws securing the expression housing. (See "C" on Fig. 2.)
10. Remove the Model 12 speaker cable from the console "OUTPUT" socket and plug it into the 7-contact socket on the connector chassis. (See "E" on Fig. 2.)
11. Plug the adapter cable into the "OUTPUT" socket on the console. (See "F" on Fig. 2.)
12. Plug the LESLIE Speaker cable into the 6-contact socket on the connector chassis. (See "G" on Fig. 2.)
13. Remove the first and second flathead machine screws from the right side of the metal rail on the underside of the keyboard shelf. Remove the control switches from the black wooden mounting block. Install the block under the rail using the two long screws provided.

ELECTRO MUSIC
CBS Musical Instruments

