

LESLIE CONTROL CENTER

INSTALLATION INSTRUCTIONS FOR LESLIE

011593 FIVE STATION CONTROL CENTER

The 011593 Five Station Control Center has been designed to allow the dealer to demonstrate up to five Leslie Speakers from one organ console by merely selecting switches. The control center will work only with organs that are normally connected to a Leslie speaker with one of the following adapters: 27-1, 27-2, 27-5, 27-6, 27-8, 27-9, 6091-7, 6116-7, 6202-7 and 013342.

Instructions for installing adapters in the organ are included with them. The 5 pin plug from the control center should be plugged into the adapter socket. The power cord from the control center should be plugged into an outlet providing 115VAC 60 Hertz. Any number of Leslie Speakers from one to five may then be plugged into the outlets on the control center connector chassis. Speakers which may be used are models 120, 120C, 125, 145, 147RV and 247RV. Any amplifiers having input load resistors should have the switch put in the open position.

Operation

When the organ is turned on, all 7 switches on the control center will light up. When a switch is turned on, it will change color. The tremolo switch is white when off and blue when on. The console switch is red when off and green when on, and the echo speaker switches are amber when off and green when on.


Echo speaker switch #1 will control the speaker which is plugged into the left hand socket on the speaker connector chassis. The second socket is controlled by echo speaker switch #2, etc. All switches are on when in the down position.

Any combination of Leslie Speakers may be sounded at once by turning on their respective switches. The speakers in the console may also be used either alone or with any of the Leslie Speakers by turning the console switch on.

The Leslie rotors may be switched to either tremolo or chorale speed by the tremolo switch on the control center. No regular rail mounted Leslie tremolo or echo switches are required when using the control center.

Replacement Parts List

010322	Cap and cable clamp
060467	Capacitor .01 Mfd 1 Kv disc ceramic
011726	Fuse, 12 amp.
055178	Fuseholder
011528	Leg assembly
012757	Pilot light #1768
013060	Plug, 5 pin
026914	Relay, power
011254	Relay, tremolo
010934	Resistor, 8 ohm 10W
012583	Switch, console
012591	Switch, echo speaker
012542	Switch, Tremolo - Chorale
011718	Transformer, 6 volt

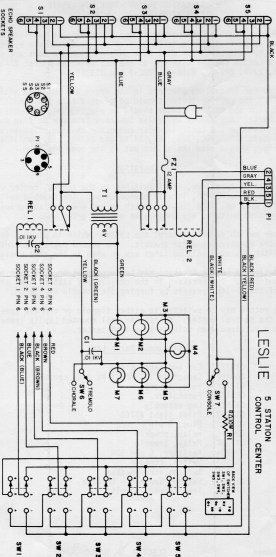

SCHEMATIC, DIAGRAM
011775